


728

07-08 GM DURAMAX 6.6L

4" PARTICULATE FILTER BACK DUAL SYSTEM

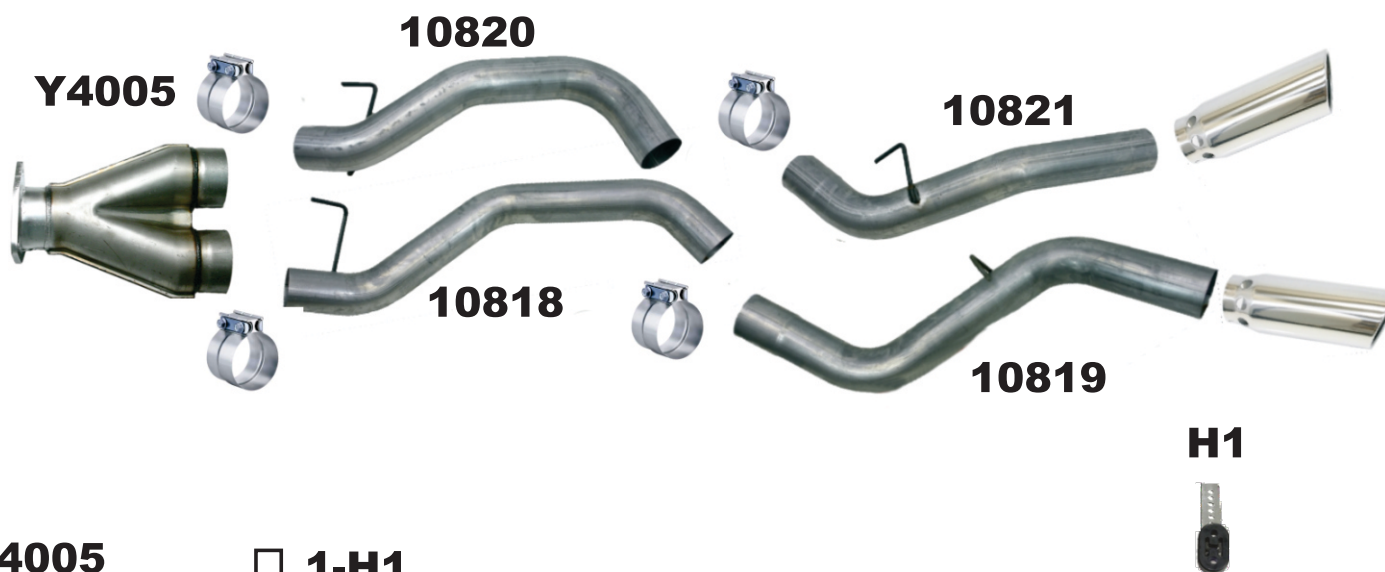

- | | |
|---------------------------------------|--------------------------------------|
| <input type="checkbox"/> 1-Y4005 | <input type="checkbox"/> 1-H1 |
| <input type="checkbox"/> 1-10820(2-3) | <input type="checkbox"/> 6-LJ400 |
| <input type="checkbox"/> 1-10818(2-2) | <input type="checkbox"/> 1-BRACKET |
| <input type="checkbox"/> 1-10821(2-3) | <input type="checkbox"/> 2-405014RAC |
| <input type="checkbox"/> 1-10819(2-3) | |

3- 7/16 x 1 1/2" FT Bolt
3- 7/16 Flanged Nut

FLO~PRO
PERFORMANCE EXHAUST

PICKED BY: _____

KIT #728
07NBS - 08 CHEV/GM DURAMAX 6.6L
4" PARTICULATE FILTER BACK DUAL SYSTEM
(NEW BODY STYLE)



***Warning: Off-Road Systems require redirecting brake lines.
Make sure to check for clearance.***

Notes:

FLO~PRO Performance Exhaust Systems are designed to fit stock trucks with OEM hitches, tires, wheels, and spare sizes. Any suspension lifts or other variations may require modification of the new exhaust system for proper fit and finish.

Do not tighten clamps until the complete system is in place. Snug clamp down so it will hold the pipe but pipe can still be moved.

WD40 or equal will make removal of hangers easier. Do not tighten clamps until installation is complete.

A small tack with a mig welder is recommended on all clamp connections.

1. Unbolt the flange fastening the exhaust pipe/muffler/tailpipe assembly to the catalytic converter. Remove the metal hangers from the OE rubber hangers. Remove the OE system from the truck. You may need to cut the OE system to aid in the removal.
2. Bolt the "Y" pipe to the flange behind the particulate filter using the supplied bolts and reusing OE gasket, make sure that the outlets of the "Y" pipe are horizontal (see Figure1) . Install the right exhaust pipe into right outlet of "Y" pipe, place the right tail pipe onto the right exhaust pipe, make sure to install metal hanger into OE rubber hanger and clamp connections. Install the driver's side exhaust pipe into left outlet of "Y" pipe. Place the metal hanger into the OE rubber hanger.
3. Before installing left side tailpipe remove the OE small bracket supporting the metal wiring and **install the supplied bracket** (see Figure 2). Re-route wiring to make sure there is enough clearance from tailpipe. You will have to bend the metal wiring to re route (see Figure 3). Install the left tail pipe onto the outlet of left exhaust pipe. Install supplied hanger to the frame directly above the metal hanger on left tail pipe. Install clamps on left connections.

4. With the “Y” pipe and other pipes mounted loosely, adjust the new Flo-Pro system for clearance and appearance. Evenly tighten all bolts and clamps.

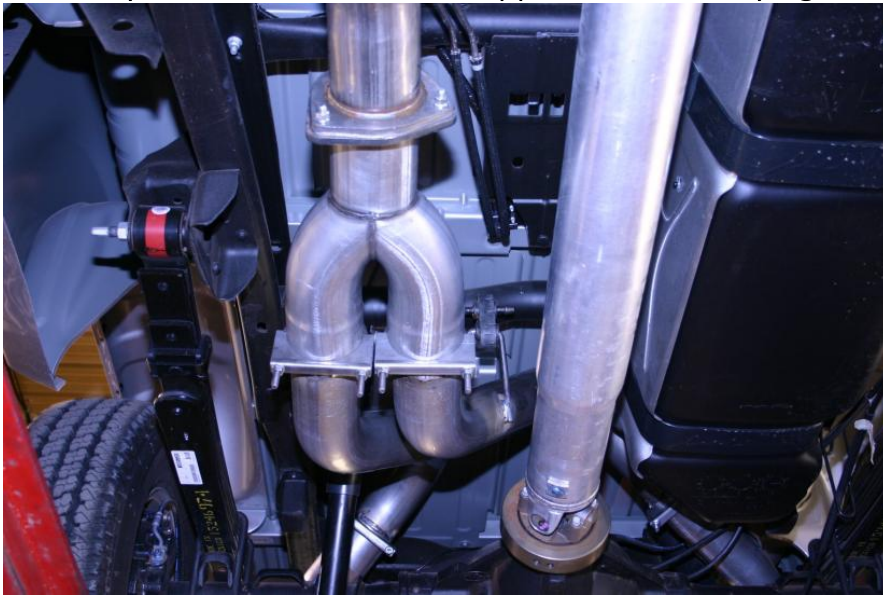


Figure 1

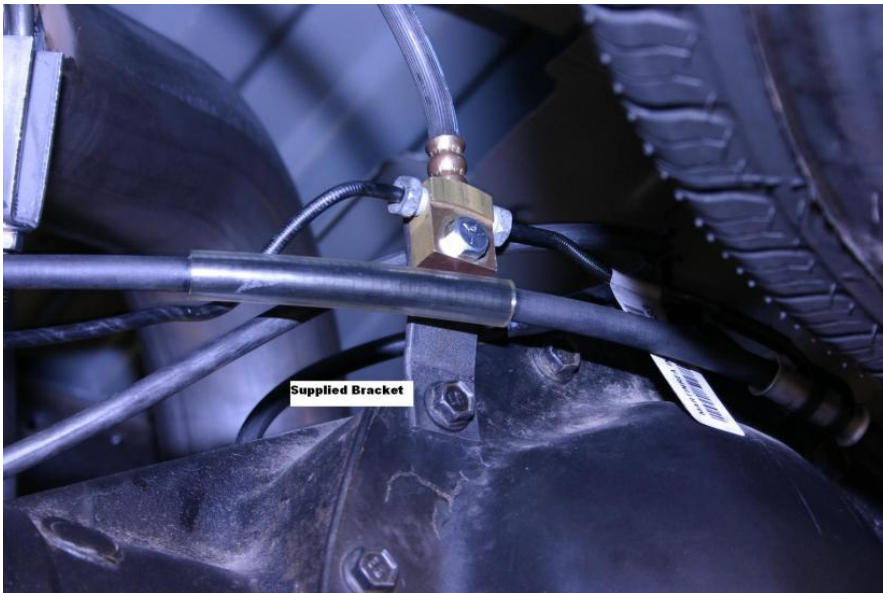


Figure 2



Figure 3