


RACE
APPLICATION
ONLY

875

**2016-2017 GMC CANYON/ CHEVROLET COLORADO
3" TURBO BACK RACE EXHAUST WITH MUFFLER (NO BUNGS)
CREW CAB SHORT BOX/ CREW CAB LONG BOX**

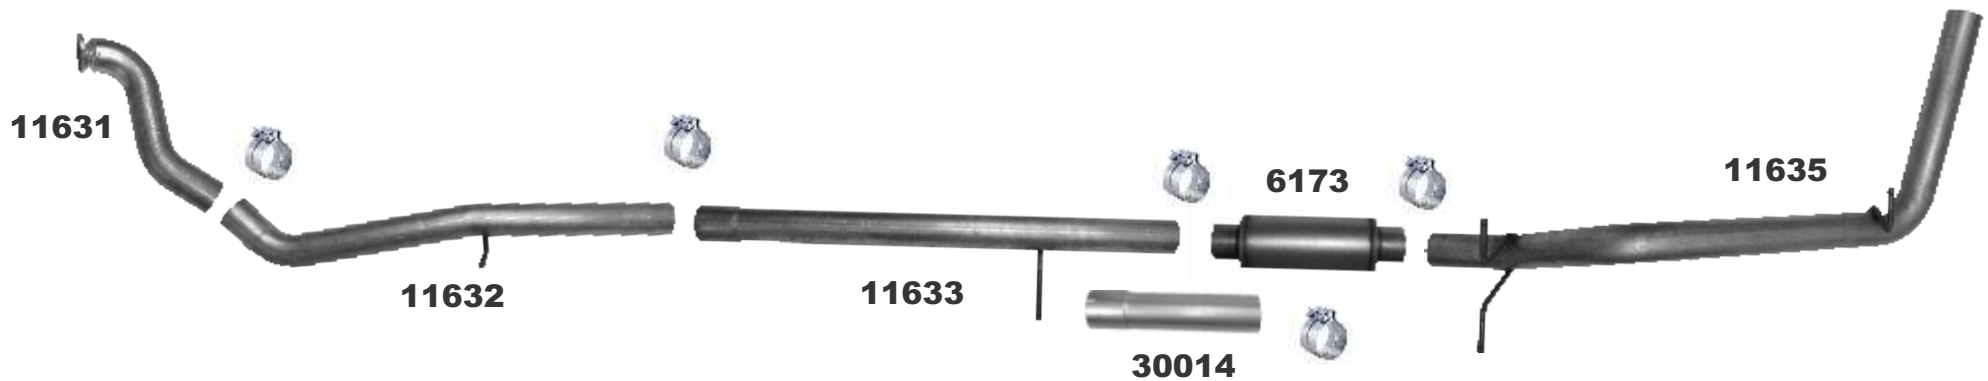

- 1 - 11631 (7-3)
- 1 - 11632 (7-3)
- 1 - 11633 (7-4)
- 1 - 30014 (7-3)
- 1 - 6173 (7-5)
- 1 - 11635 (7-4)
- 5 - LJ300

FLO~PRO
PERFORMANCE EXHAUST

PICKED BY: _____



**WARNING: BEFORE YOU BEGIN, VERIFY
THAT YOU RECEIVED THE RIGHT KIT &
EACH PART LISTED ON THE REVERSE PAGE**



KIT # 875

2016 GMC CANYON/ CHEVROLET COLORADO 2.8L DURAMAX CREW CAB SHORT BOX/ CREW CAB LONG BOX 3" TURBO BACK RACE SYSTEM

Warning:

*This system is designed for **race use only**. **May also void manufacturer's warranty**. Allow the truck's exhaust system to cool before removal. Always practice safe work habits, i.e. jack stands, gloves, safety glasses etc.*

Notes:

- *****ALWAYS MAKE SURE ALL COMPONENTS ARE IN FLO~PRO BOX ACCORDING TO PICK SHEET BEFORE STARTING REMOVAL OF STOCK EXHAUST SYSTEM*****
- *FLO~PRO Performance Exhaust Systems are designed to fit stock trucks with OEM hitches, tires, wheels, and spare sizes. Any suspension lifts or other variations may require modification of the new exhaust system for proper fit and finish.*
- *WD40 or equal will make removal of hangers easier. A small tack with a mig welder is recommended on all clamp connections.*
- **DO NOT** fully tighten clamps until full system is installed and adjusted.

Removal of OEM Exhaust System

1. Remove all sensors, DEF injector connections from downpipe, SCR and Diesel Particulate Filter.
2. Starting from rear of vehicle and working forward, remove tailpipe and DPF.
3. Next you will remove SCR section (to remove SCR in one piece you will need to lower transmission cross member)
4. Unbolt downpipe and remove through top of engine bay.

Installation Instructions of new Exhaust System

1. Install downpipe (part # 11631) making sure to use factory metal gasket. Fully tighten mounting hardware.
2. Install intermediate pipe (part # 11632). Make sure to put in factory rubber isolator
3. Install second intermediate pipe (part # 11633). Make sure to put in factory rubber isolator
4. For crew cab long box trucks you will install extension pipe (part # 30014) Do not use this pipe on crew cab short box models.
5. Install muffler (part # 6173)
6. Install tailpipe (part # 11635)
7. Starting at bottom of downpipe, tighten each clamp as you make your way towards the rear of the vehicle making sure there is adequate clearance around all pipes. (ie: transmission lines, hoses, electrical wiring, etc)

**Technical Support: 1-800-762-4286 or e-mail, techsupport@flopro.com
www.flopro.com**