


RACE  
APPLICATION  
ONLY

# SS876

2014-2017 JEEP GRAND CHEROKEE  
3" TURBO BACK-DPF AND CAT RACE KIT (NO BUNGS)

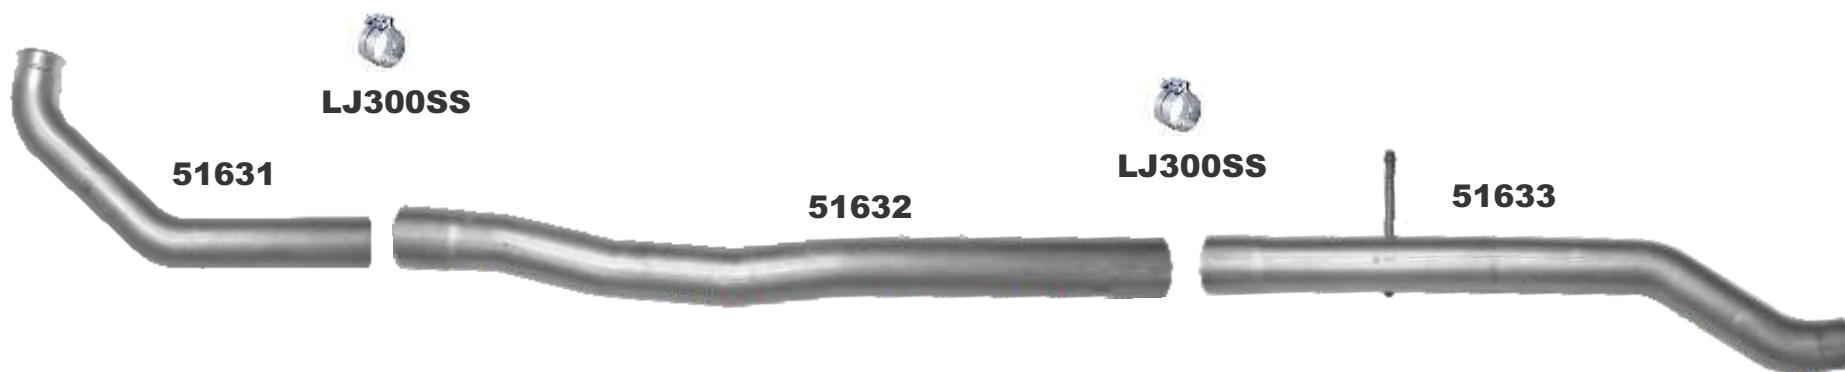

- 1 - 51631
- 1 - 51632
- 1 - 51633
- 2 - LJ300SS

**FLO~PRO**  
PERFORMANCE EXHAUST

PICKED BY: \_\_\_\_\_



**WARNING: BEFORE YOU BEGIN, VERIFY  
THAT YOU RECEIVED THE RIGHT KIT &  
EACH PART LISTED ON THE REVERSE PAGE**



**KIT # SS876  
2014-2017 JEEP GRAND CHEROKEE 3.0L ECODIESEL  
TURBO BACK-CAT AND DPF RACE KIT**

**Warning:**

*This system is designed for **race use only**. **May also void manufacturer's warranty**. Allow the truck's exhaust system to cool before removal. Always practice safe work habits, i.e. jack stands, gloves, safety glasses etc.*

**Notes:**

- **\*\*\*ALWAYS MAKE SURE ALL COMPONENTS ARE IN FLO~PRO BOX ACCORDING TO PICK SHEET BEFORE STARTING REMOVAL OF STOCK EXHAUST SYSTEM\*\*\***
- **FLO~PRO** Performance Exhaust Systems are designed to fit stock trucks with OEM hitches, tires, wheels, and spare sizes. Any suspension lifts or other variations may require modification of the new exhaust system for proper fit and finish.
- WD40 or equal will make removal of hangers easier. A small tack with a mig welder is recommended on all clamp connections.
- **DO NOT** fully tighten clamps until full system is installed and adjusted.

**Removal of OEM Exhaust System**

1. Remove all sensors, DEF injector connections from downpipe, SCR and Diesel Particulate Filter.
2. Starting from front of muffler and working forward, loosen clamp at muffler and slide muffler rearward.
3. Next you will remove SCR section (to remove SCR in one piece you may need to lower cross member/s)
4. Unbolt downpipe and remove through top of engine bay.

**Installation Instructions of new Exhaust System**

1. Install downpipe (part # 51631). Do not fully tighten V-band clamp at this time as pipe may need to be rotated to line rest of system up.
2. Install intermediate pipe (part # 51632). Make sure to put in factory rubber isolator
3. Install second intermediate pipe (part # 51633). Make sure to put in factory rubber isolator
4. Starting at bottom of downpipe, tighten each clamp as you make your way towards the front of the muffler making sure there is adequate clearance around all pipes. (ie: transmission lines, hoses, electrical wiring, etc)

**Technical Support: 1-800-762-4286 or e-mail, [techsupport@flopro.com](mailto:techsupport@flopro.com)  
[www.flopro.com](http://www.flopro.com)**